WLM-REEF A

999

(4)

(9)

(%)

(4)

999

(%)



Setup Instructions

1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.

<u>(23)</u>

<u>B</u>

(3)

03

(4)


3


B

(3)

(5)

- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

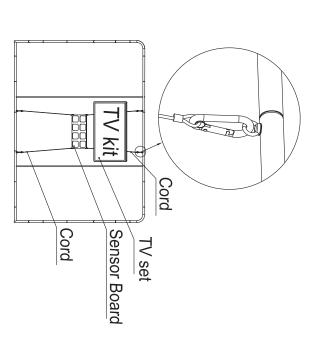

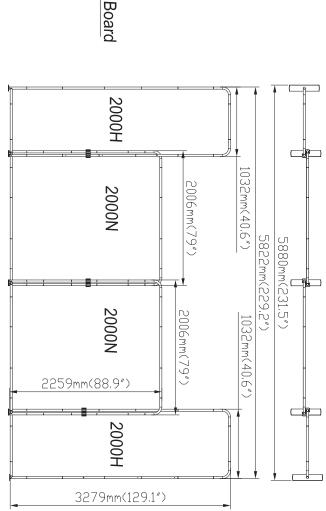

NO. Confirm	Confirm	NO.	Confirm	O. Quantity	y Confirm No	O. Quantity	tity Confirm N	VO. Quar	Confirm 1	Quantity	nfirm NO	Quantity Co	NO. Quantity Confirm NO.	Quantity	NO.
											(R22)	ယ	27	4	02
						\						00	35	4	Q
		40"										00	90°	4	05)
CA500	C	32"										2	(22) (E)	4	
CA900	C	22.6"										2	(22)	00	23
Shipping Case accessories	TV kit S		(D	Frame	Φ	Frame	ne	Frame	O	Frame		Frame		Frame	