
QuickZip™ Supreme Display

ASSEMBLY INSTRUCTIONS

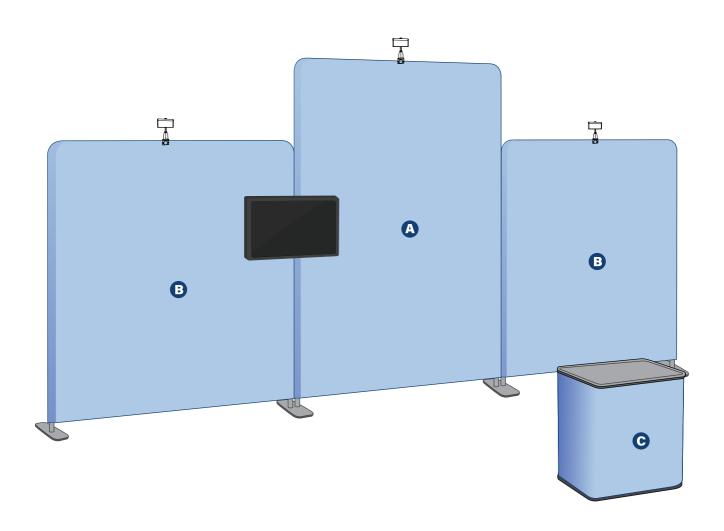

INCLUDED:

- A QuickZip™ Supreme Center Panel
- B QuickZip™ Supreme Side Panels
- c Hardcase Podium











QuickZip™ Supreme Display

ASSEMBLY INSTRUCTIONS

BOX CONTENTS

















(2) Panel Clamps (4) Support Feet (15) Connected Poles (3) Light Clips (6) Bottom Corners (3) LED Lights (6) Top Corners (3) Backdrop Graphics

(Ships Separately)

BOX CONTENTS - TV MOUNT







(4) M5/M6 Washers

























Assemble the Frame

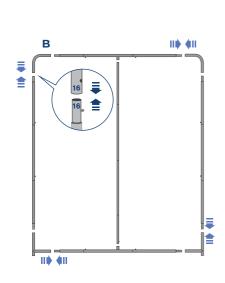

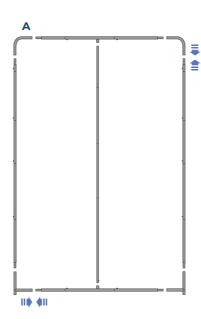


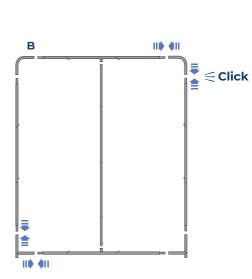


Set up one panel at a time to avoid mixing the Poles




Install the Graphics and Attach Feet

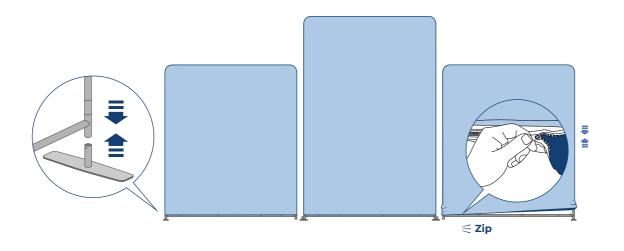


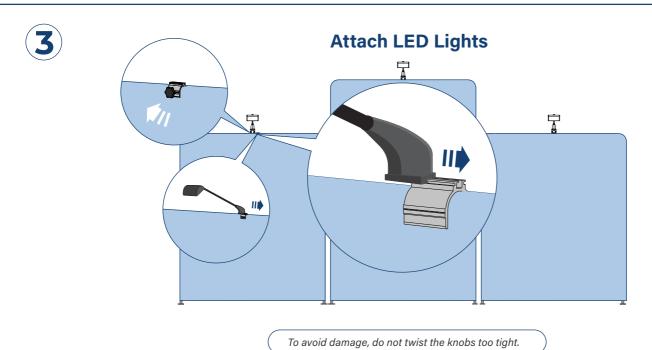




Connect the Panels

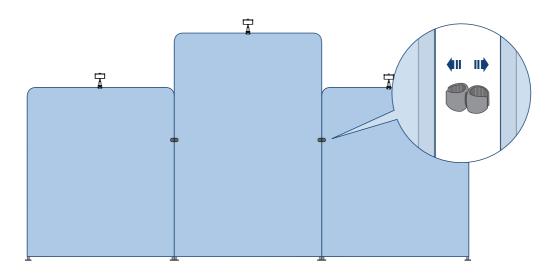


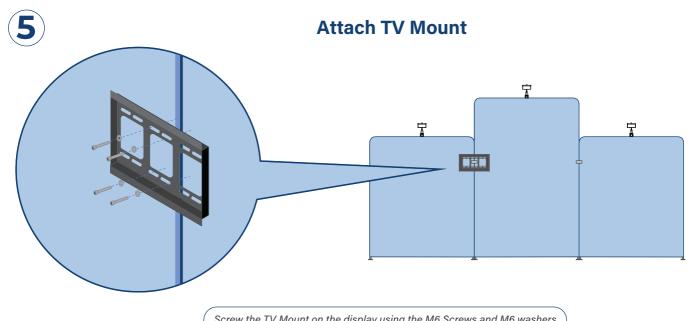


Screw the TV Mount on the display using the M6 Screws and M6 washers.

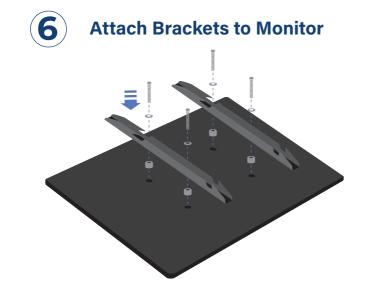

Use the Spacers and M4, M5, or M8 Screws.

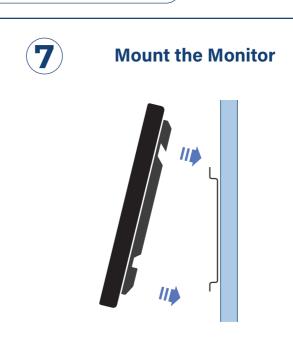

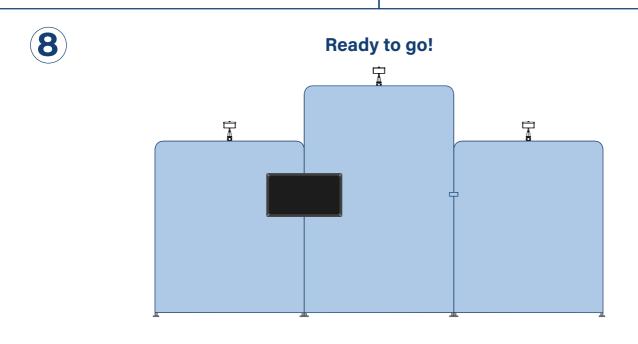

G Hardcase / Podium

ASSEMBLY INSTRUCTIONS







(1) Storage Case

BOX CONTENTS



(1) Counter Top




(4) Poles



(1) Podium Graphic (Ships Separately)




Prepare the Base

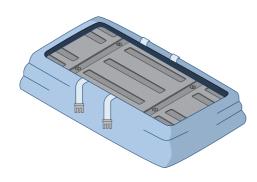

Tuck the bottom end of the Graphic under the Case Lid




Set Up the Hardware

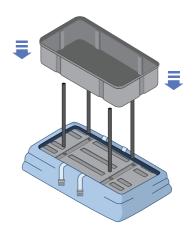

Install the Poles into the Case Lid, then install the Storage Case.



Pull Up Graphics

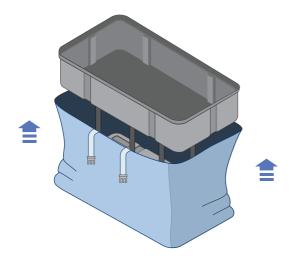



Attach the Counter Top

