## WLM-SEADRAGON A




## Setup Instructions

- according to the assembly diagram 1. Take all the parts out of the bags and lay them on the ground
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if spring pop up on place. difficult you can slightly twist the parts together to make the locking
- the bottom, now close the Zipper. feed only a few feet, then stand the frame up then slide the fabric to the printed fabric. Feed the fabric from the round edges of the frame, 4. Its time to get your hands cleaned as now you are ready to handle
- stand, lift the fabric panels and fit on the feet 5. You can set up the feet in the position that you want to erect the
- they are designed tight so they lock well 6. To lock the frames together you can use the "S" shaped brackets,

2259mm(88.9")

clear plastic clips. 7. If you have a header in the kit you can fix to the top by using the

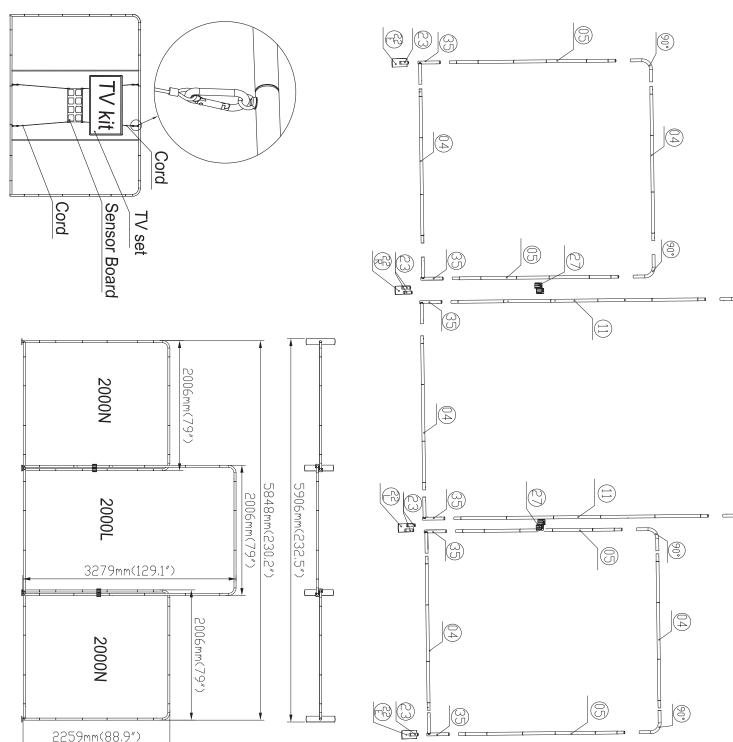

NO.	04)	05	1	23	27)	
NO. Quantity Confirm NO.	0	4	2	6	2	Frame
firm N	(1)				(5)	
Ö	35	(E2)	(22) L	R22	90°	
Quantity	6	2	1		6	Frame
Confirm 1	\					
<u>ار</u>						_
Quantity Confirm NO.						Frame
n NO.						
. Quantity						Frame
/ Confirm						(D
NO.						
Quantity						Frame
Confirm						
NO.						
Quantity				\		Frame
Confirm						
NO.			40"	32"	22.6"	7
Confirm						TV kit
NO.				CA500	CA900	Shippi
NO. Confirm						ng Case
					2000N*2+2000L*1	Shipping Case accessories